




## SECUNORM GENIAL

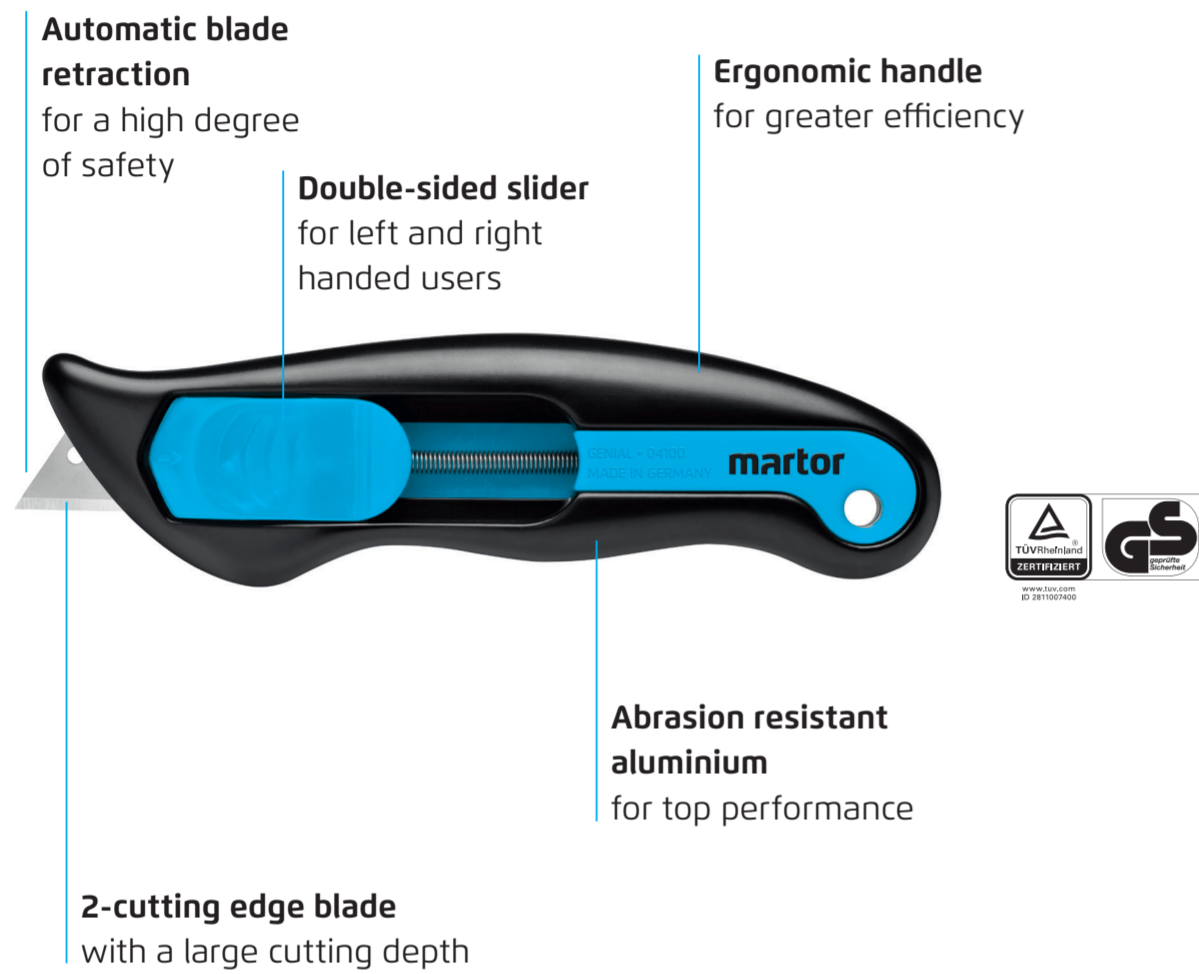


### USAGE

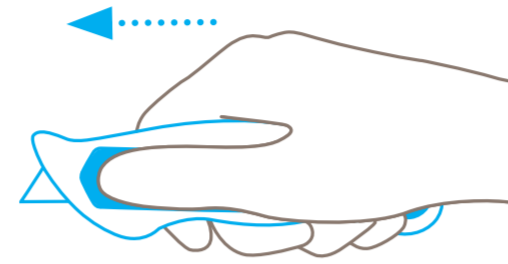


Use the slider to **engage the blade** for cutting.

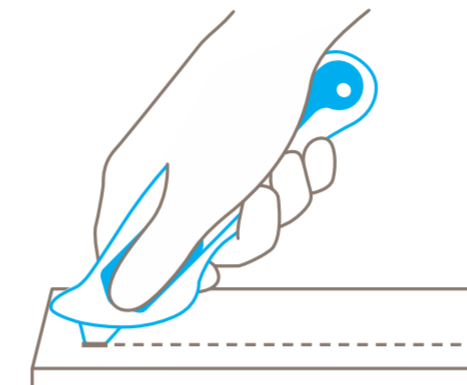

**Pierce** into the cutting material to cut.

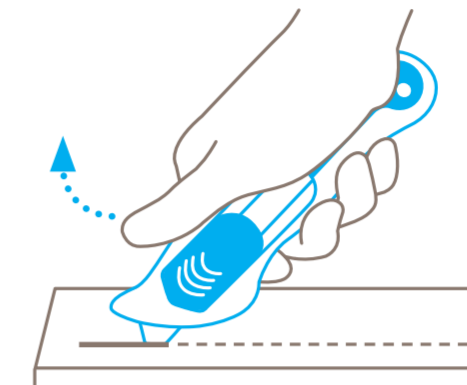


Always remove your **thumb from the slider** to ensure automatic blade retraction.

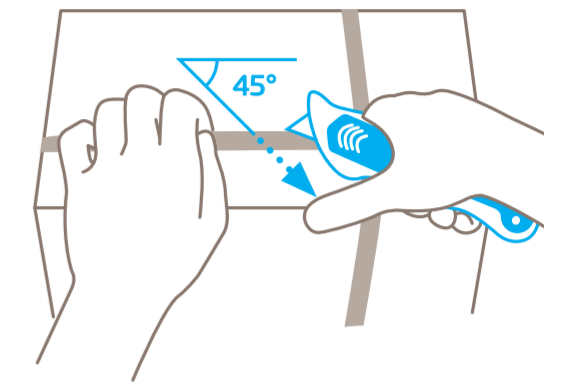


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


### BLADE CHANGE

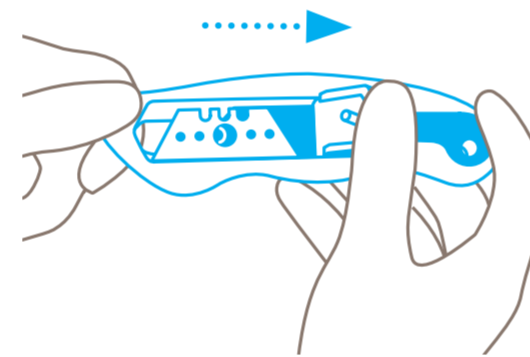


Change the blade from the front side. Simply **lift** the slider and carefully remove the blade.

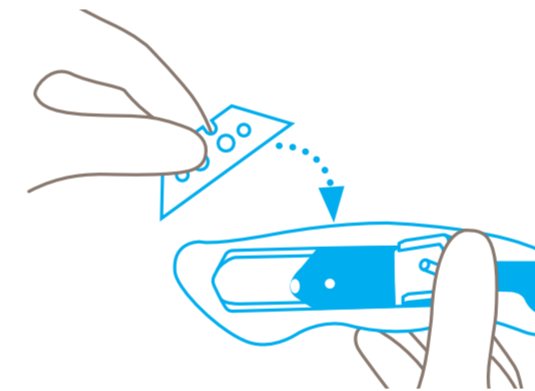

Either turn the blade around or replace it and re-insert **exactly over the locating lug and metal pin**.

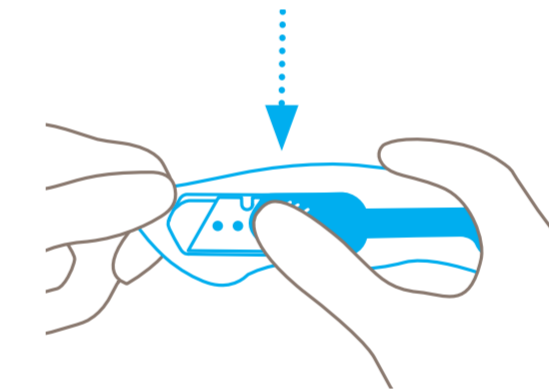


**Fully re-close the slider** ensuring the metal pin clicks into place.

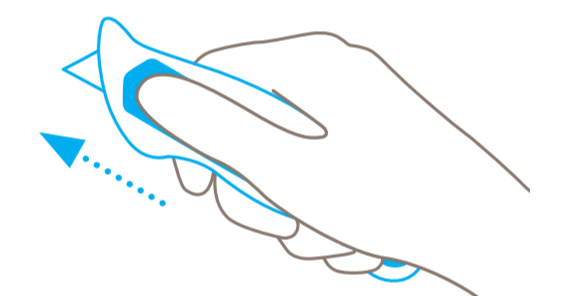


Finally, **test once** to check.

### PROTECTION OF USER

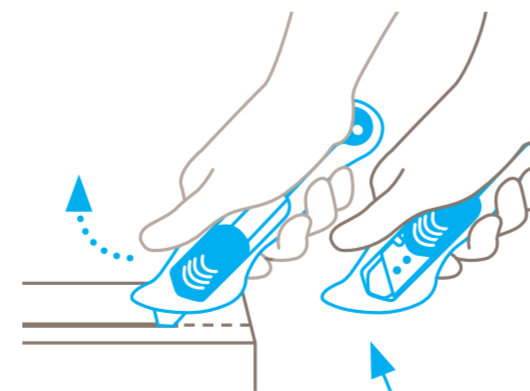


Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

### DISPOSAL

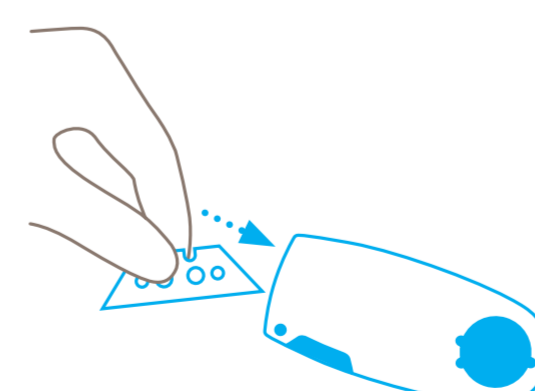

Your **SAFEBOX** is the best place to store **used blades**.

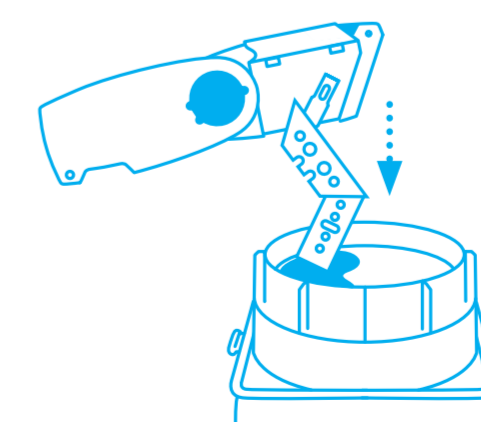

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.

**Please note:** To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.