




SECUNORM PROFI

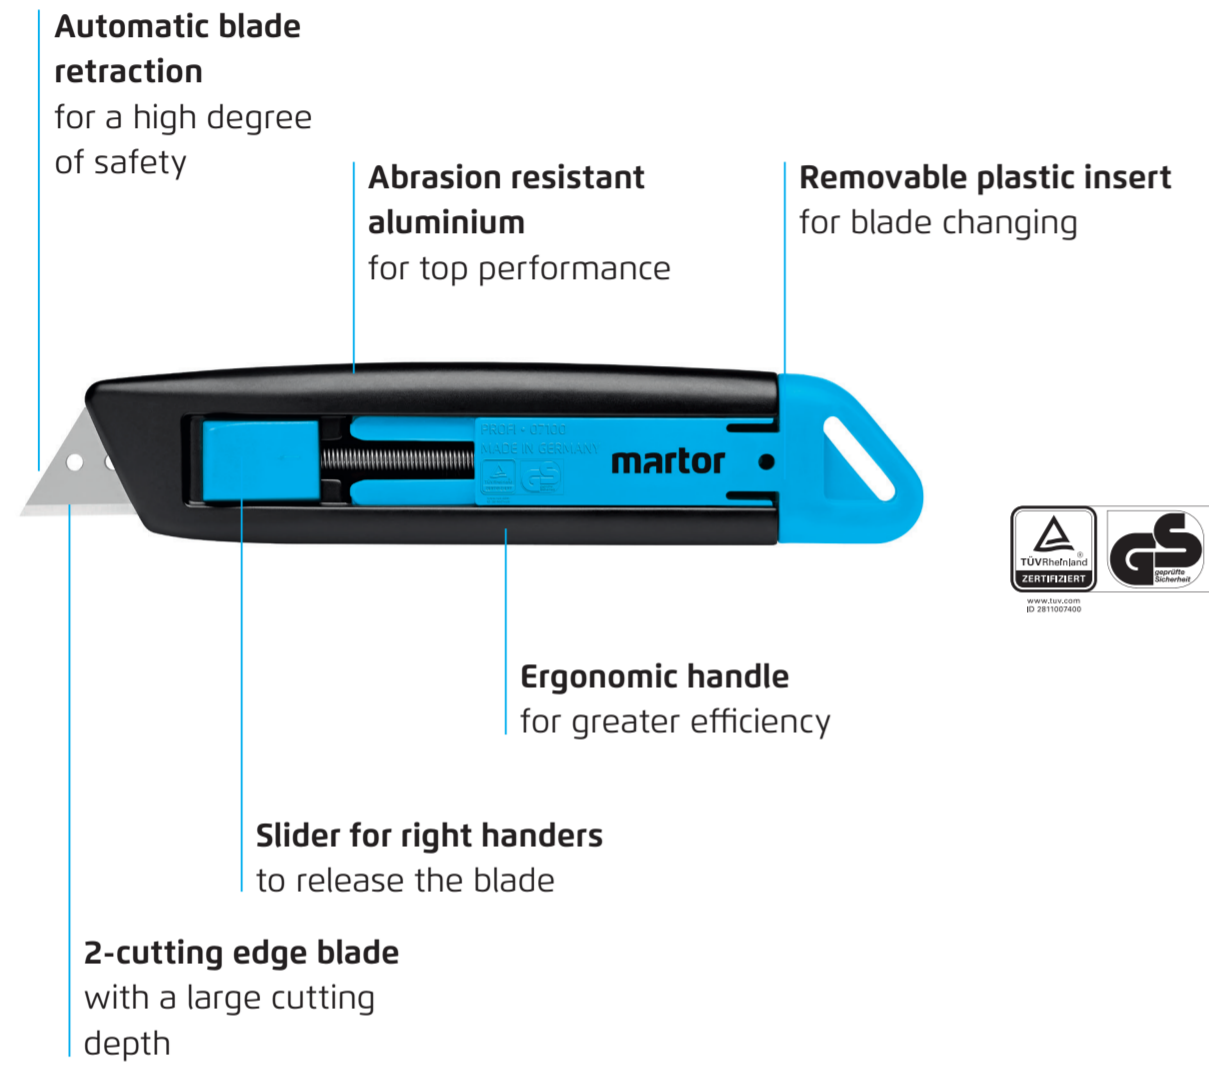


USAGE

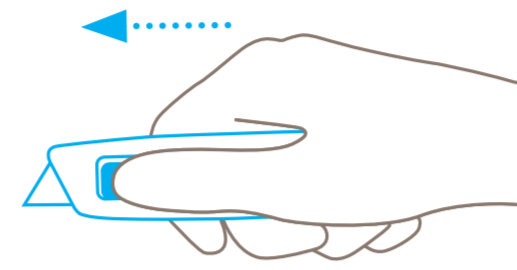


Use the slider to **engage the blade** for cutting.

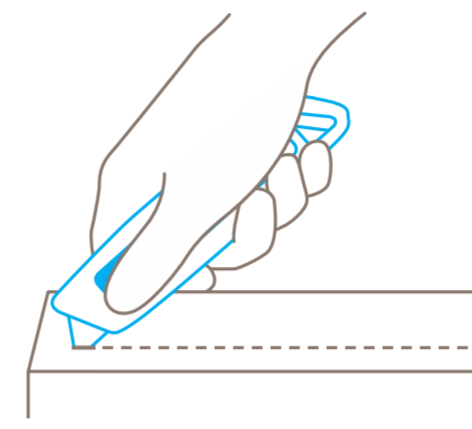

Pierce into the cutting material to cut.

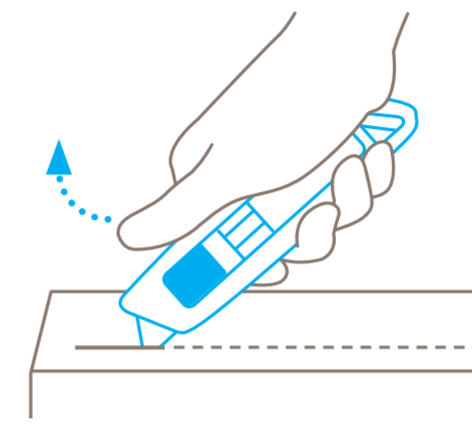


Always remove your **thumb from the slider** to ensure automatic blade retraction.

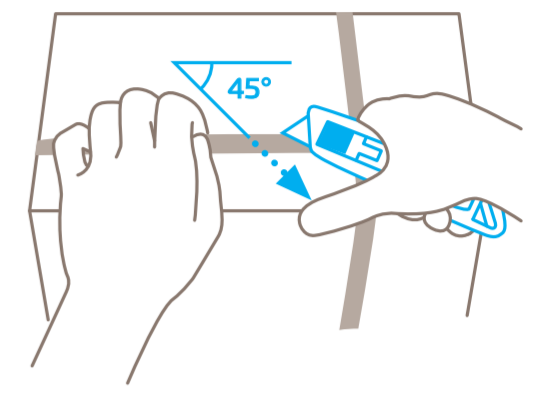


For best results, cut plastic strapping band **diagonally** (at a 45° angle).


BLADE CHANGE

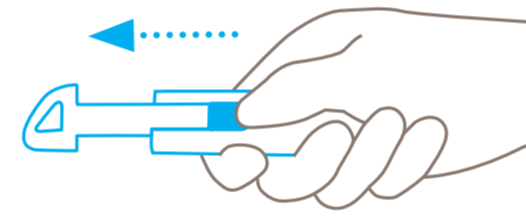


Use the slider to **push** the plastic insert back and out of the handle. Don't pull the insert while holding onto the slider.

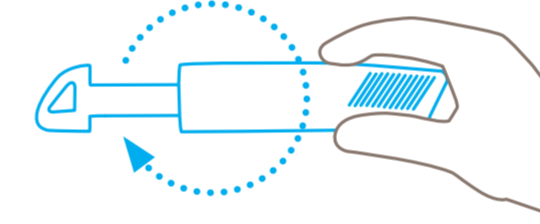

Before removing the plastic insert **turn the knife around by 180 degrees**.

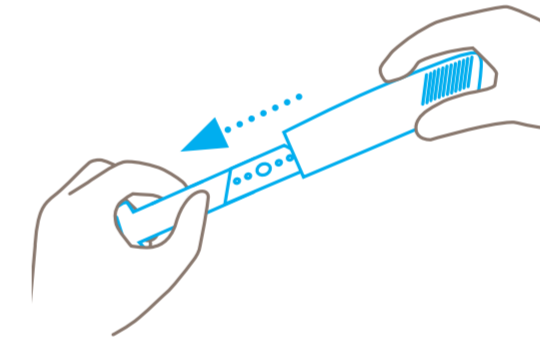


Pull the plastic insert in the direction of the arrow and remove the blade carefully. Reverse or replace the blade and make sure it fits **exactly** over the locating lug.

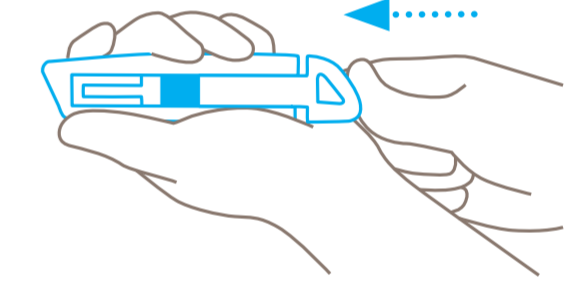

Never hold your hand in front of the blade exit while pushing the slider mechanism back into the handle!


Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.

PROTECTION OF USER

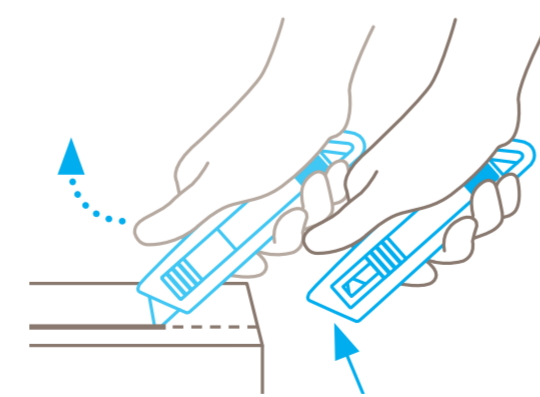


Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

DISPOSAL

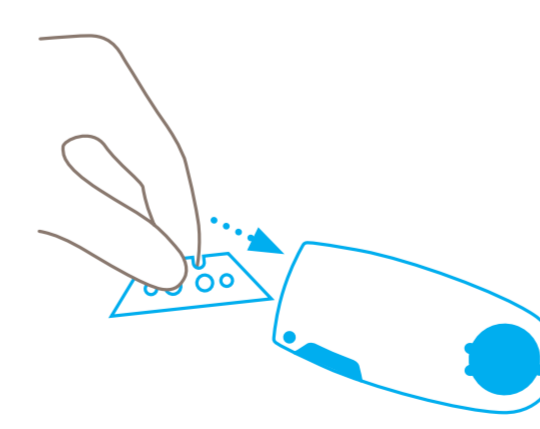

Your SAFEBOX is the best place to store **used blades**.

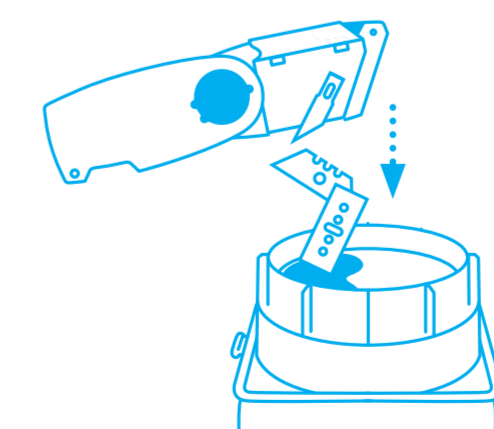

When the SAFEBOX is full, **empty all contents** into your USED BLADE CONTAINER.